 


OPERATING INSTRUCTION

Press for 'H' setting, press and hold for fast 'H' setting.

Press to start timer, press again to stop timer.

Press for 'M' setting, press and hold for fast 'M' setting. (press 'H' and 'M' buttons at the same time to reset timer to zero).



Press 'H', 'M' and start/stop buttons at the same time to show real time.

CLOCK SET

- The clock has to reset after replacing new battery.
- Press "H" button for desired hour, and press "M" button for desired minute. When complete setting, press Start/Stop button.

TIMER DISPLAY

- Timer can be programmed countdown time up to 19 Hours 59 Minutes.
- Timer can be used as a stopwatch and the count up time up to 19 Minutes 59 Seconds.

TIMER ALARM (COUNT DOWN SET)

- Press "H" and "M" button at the same time to reset timer to zero
- When Timer counts down to 0 min.00sec. (0 00 will show on display, the alarm will sound and the red light will flash)
- Press any key to stop the alarm.

STOPWATCH (COUNT UP SET)

- Press "H" and "M" button at the same time to reset timer to zero.
- Press to Start/Stop button to start, again to stop.

REPLACEMENT OF BATTERY

Use a screwdriver to open the battery cover at backside of Timer. Remove exhausted battery, insert a new 1.5V LR44 size button cell battery or equivalent (make sure positive '+' is facing yourself) and close battery cover. The display will appear 18:88, 2 seconds later, the digit will change to 0:00 and alarm will sound. Then you can set the time clock.