


# 331 Under Pillow Vibration Alarm Clock

Wake to the vibration alarm without disturbing others or choose the sound option Helpful for anyone with hearing or sight limitations

## FUNCTIONS AND CONTROLS

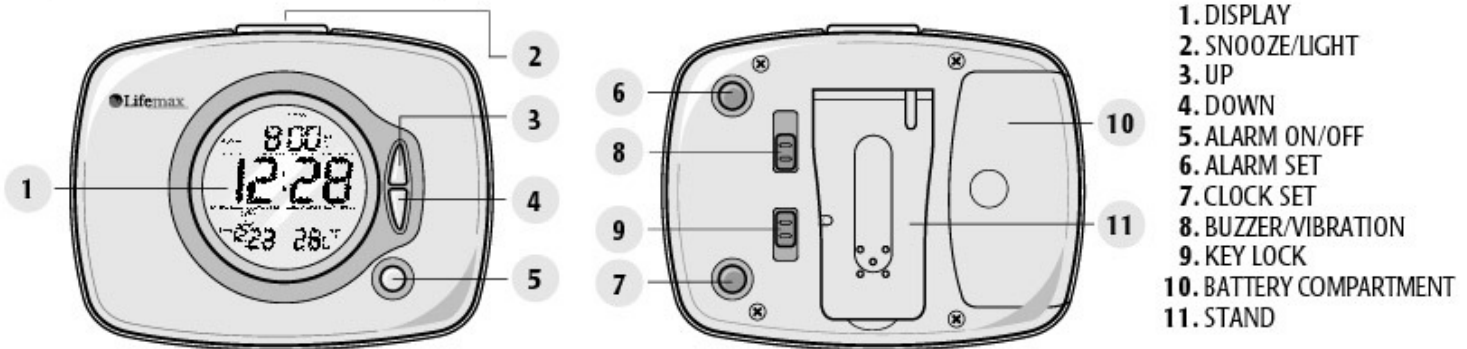

1. DISPLAY
2. SNOOZE/LIGHT
3. UP
4. DOWN
5. ALARM ON/OFF
6. ALARM SET
7. CLOCK SET
8. BUZZER/VIBRATION
9. KEY LOCK
10. BATTERY COMPARTMENT
11. STAND

## TIME SETTING

1. Press Holding the TIME SET for 2 sec. to time set mode and the minute will flash on the LCD.
2. Press the UP/DOWN button to adjust the minutes.
3. Press the TIME SET button again to Hour setting and press the UP/DOWN button to adjust.
4. Press the TIME SET button again to year setting and press the UP/DOWN button to adjust.
5. Press the TIME SET button again to month setting and press the UP/DOWN button to adjust.
6. Press the TIME SET button again to date setting and press the UP/DOWN button to adjust.
7. Press the TIME SET button again to return to normal display mode.

## SETTING BOTH ALARMS

1. When the LCD display ALARM 1, press & holding the ALARM SET for 2 sec. to Alarm 1 setting mode and the time will flash on the LCD.
2. Press the UP/DOWN button to adjust the hours.
3. Press the ALARM SET button again to minute setting and press the UP/DOWN button to adjust.
4. Press the ALARM SET button again to return to normal display mode.
5. Press the ALARM SET button again and enter ALARM 2 setting mode.
6. Press & hold the ALARM SET button for 2 sec. to hour setting and press the UP/DOWN button to adjust.
7. Press the ALARM SET button again to minute setting and press the UP/DOWN button to adjust.
8. Press the ALARM SET button again to return to normal display mode.

## WAKE UP TO ALARM

1. Set the alarm time to the desired alarm time.
2. Press the ALARM ON / OFF button to turn the alarm on. When the alarm is turned on, display will show symbol.
3. Place the BUZZER / VIBRATION selector to buzzer / vibration / buzzer & vibration.

## SNOOZE FUNCTION

When the alarm sounds you may press the SNOOZE button to lay it off for around 8 minutes.

### TO ACTIVATE BACKLIGHT DISPLAY

Press LIGHT button and display will be lit.

### TO LOCK THE FUNCTION KEY

Place the lock selector to lock position, the UP / DOWN / TIME SET / ALARM SET cannot be used.

## SPECIFICATION

AAA size battery x 2

**NOTES:** For more stable operation, we **STRONGLY RECOMMEND** the exclusive use of **ALKALINE-BATTERIES**.

## BATTERY INFORMATION

This product uses 2pcs AAA batteries (not included)

1. Use only designated battery type. Do not use re-chargeable batteries. Do not mix battery types.
2. Read instructions carefully and install batteries correctly observing the polarity (+/-) sign to avoid leakage.
3. Always replace sets of batteries at the same time. Do not mix old and new batteries.
4. Do not attempt to recharge non-rechargeable batteries.
5. Remove batteries from the product when it will not be used for an extended period of time to avoid leakage.
6. Remove exhausted battery to avoid leakage.
7. Do not short out battery contacts.
8. Do not dispose of batteries in fire.
9. Do not immerse electrically operated products in water or other liquid. Wipe clean only.

Please retain this information for future reference.

## LIFEMAX LTD.

The Business Centre,  
Brimpton Lane,  
Brimpton, Reading.  
RG7 4TN, England.

[www.lifemaxuk.co.uk](http://www.lifemaxuk.co.uk)

Retain for reference

