

## Installation Methods

Your doorbell and pager are already paired to the bell push. To add additional chime units or pagers, please follow the pairing procedure at the end of this manual.

### Chime Unit

Simply plug the chime unit into any mains socket and switch the socket 'On'.

### Vibrating Pager

Remove the battery cover on the rear of the pager unit and insert 2 x AAA batteries, observing the correct polarity. Replace the battery cover. Slide the power switch on the side of the pager to the 'On' position.

### Bell Push

Remove the small, white battery tab and **check a suitable range exists** before mounting the bell push. The bell push should ideally be mounted in an area protected from extremes of weather.

#### Mounting using the provided screws (preferred):

Remove the cover of the bell push using a small, flat head screw driver and remove the battery. Locate the two mounting holes and use these as a template to mark the mounting surface.

Drill two holes in the marked position and mount the bell push using the screws and wall plugs provided. Replace the battery in the bell push and re-attach the cover observing the correct orientation.

#### Mounting using the adhesive pad:

Thoroughly clean the area for installation and affix the adhesive pad to the bell push. Firmly push the bell push against the area for installation and hold for 10 seconds.

## Operating Instructions

### Adjusting the Volume

The volume control is the upper button on the left side of the **chime unit** and the upper button on the rear of the **vibrating pager** (under the belt clip).

Press the button to switch between the 4 volume levels.

### Selecting the Melody

The melody control is the lower button on the left side of the **chime unit** and the lower button on the rear of the **vibrating pager** (under the belt clip).

Press the button to select one of the 52 melodies.

### Pairing the Bell Push and Chime/Pager

According to which item you wish to pair, push and hold the volume control on either the **chime unit** or **vibrating pager** for 5 seconds, until the light/LED begins to flash. The volume control is the upper button on the left side of the **chime unit** and the upper button on the rear of the **vibrating pager** (under the belt clip).

Trigger each **bell push** you wish to pair in sequence. After each push the receiver will chime to confirm the pairing.

To confirm the settings, push and hold the volume control on either the **chime unit** or **vibrating pager** for 5 seconds.

The above procedure can be used to add a number of chime units, vibrating pagers or bell pushes.

To clear all settings, push and hold the melody control for 5 seconds. The unit will pair with the next bell push activated and set the default 'Ding Dong' melody.

## Specifications

Parameter	Flashing receiver	Vibrating receiver	Transmitter
Voltage	AC 110V/ 220V	3V DC power (AAA batteries*2)	12V 23A (alkaline battery*1)
Operating temperature	-15 ℃~55℃	-15 ℃~55℃	-20 ℃~65℃
Transmission distance	250m in open air		
Operating frequency	433.92MHz ±200KHz		
Volume	65~110dB		
Power consumption	0.1 W		

## Warranty

In the unlikely event that your item develops a manufacturing fault, it is covered by a one year return to base warranty when you return the card below.

Your warranty is only valid with the original receipt, please ensure you keep this safe. The warranty runs for 12 months from the date of purchase.

If your product develops a defect during the warranty period, please call the helpline number for further advice. If instructed, please securely pack your item and return enclosing your contact details, your proof of purchase and fault details.

We will, at our discretion, repair or exchange the item in line with warranty legislation. Where no proof of purchase is provided, or the product is outside the warranty period, repairs/replacements will be offered at cost to the customer.



### Lifemax 1601-Flashing Doorbell with Vibrating Pager

Name: .....

Address: .....

Email: .....

Retailer: .....

Date of Purchase: .....



We would like to keep you up to date with other helpful products. If you would rather we did not, please tick here.