 


# Doro Secure<sup>®</sup> 580

## User guide

English



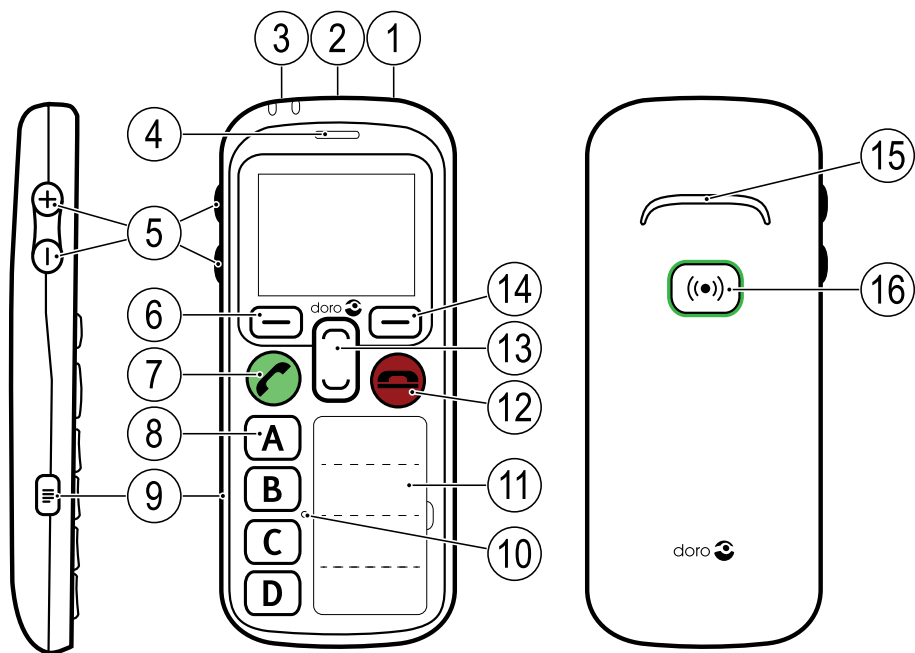



**Note!** All illustrations are for illustrative purposes only and may not accurately depict the actual device.

## English

- |                          |                            |
|--------------------------|----------------------------|
| 1. Power on/off          | 9. Settings menu           |
| 2. Headset socket        | 10. Microphone             |
| 3. Charging socket       | 11. Name list              |
| 4. Earpiece              | 12. End call key/Back      |
| 5. Volume keys (+/-)     | 13. Navigation buttons     |
| 6. Left selection button | 14. Right selection button |
| 7. Call key              | 15. Loudspeaker            |
| 8. Speed dial keys (A-D) | 16. Assistance button      |

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

# Contents

Congratulations on your purchase .....	1
Use the phone .....	1
Get started .....	1
Charge the phone .....	1
Turn the phone on .....	2
Turn the phone off .....	3
Navigate the phone  .....	3
Status bar .....	3
Calls .....	4
Make a call .....	4
Answer a call .....	5
Volume control .....	5
Handsfree mode .....	6
Headset .....	6
Emergency calls .....	7
Assistance button .....	7
Additional functions .....	7
Lock keys .....	7
My number .....	8
ICE  .....	8
Safety timer .....	8
Messages .....	9
Call log .....	9

## Congratulations on your purchase

An easy mobile phone for improved safety. Durable and splash proof (IP54) mobile with four speed dial keys for calling people you rely on with one simple press. Feel even safer thanks to an assistance button and a safety timer that can automatically dial up and send an SMS alarm to preset numbers. GPS localization lets people know where you are. Contacts can be managed by a trusted relative over the Internet using My Doro Manager. For more information about accessories or other Doro products please visit [www.doro.com](http://www.doro.com).

## Use the phone

 
### Get started

#### Charge the phone




#### CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phones type approval and guarantee.

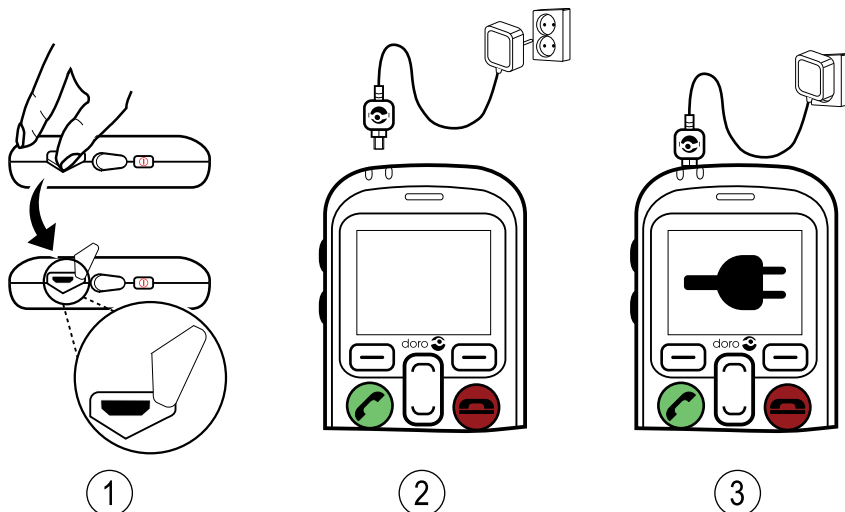


**Note!** When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet to save energy.

 
**Tip:** Use the cradle to charge your device.

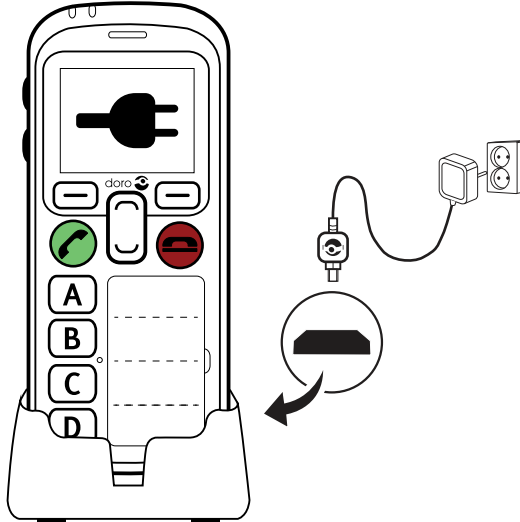

**Turn the phone on**

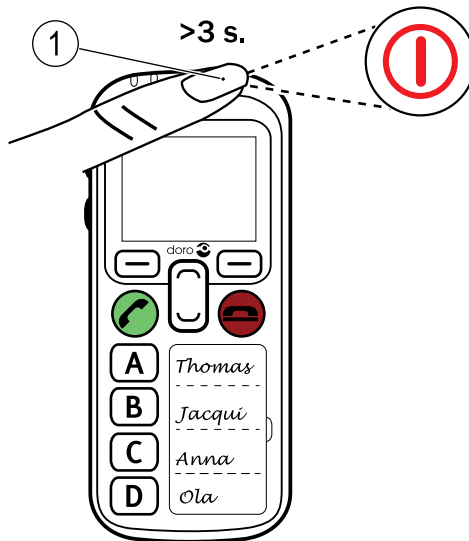 

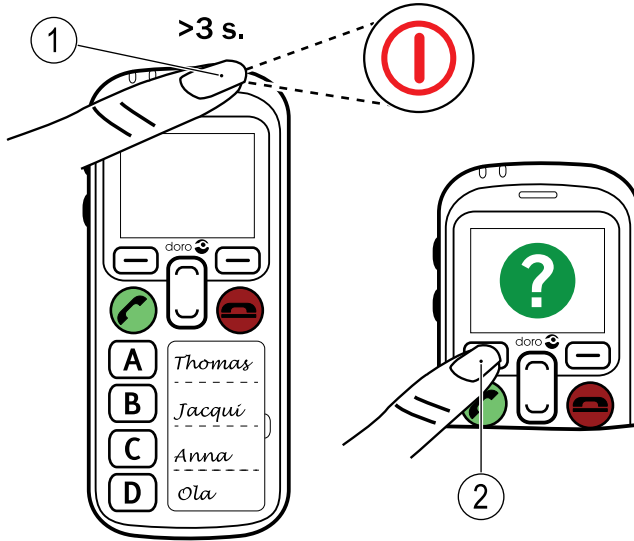 

## Turn the phone off





## Navigate the phone

### Standby (idle mode)







When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.








- Press  to return to standby mode.
- Press left selection button  to access the **Menu**.

### Scroll

- Use the arrow buttons  /  to scroll in menus.

 
### Status bar

	Signal strength (the more bars, the better signal strength)		No network coverage
	Battery level (the more bars, the more charge in the battery)		Ringtone only for incoming calls
	Ringtone and vibration for incoming calls		Vibration only for incoming calls


	Silent. No ringtone or vibration for incoming calls.		Missed call
	Unread text message/SMS		Headset connected
	Bluetooth enabled		GPS active
	On-going safety timer		

## Calls


### Make a call

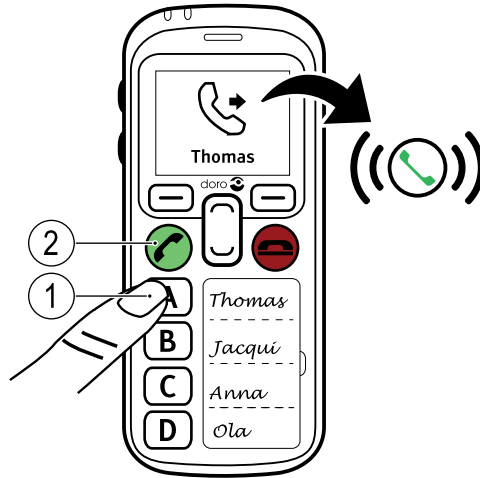

## Answer a call

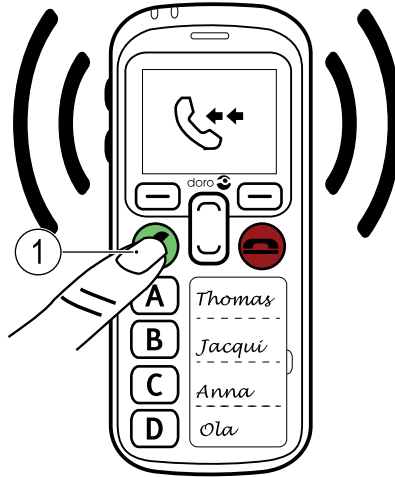 


## Volume control

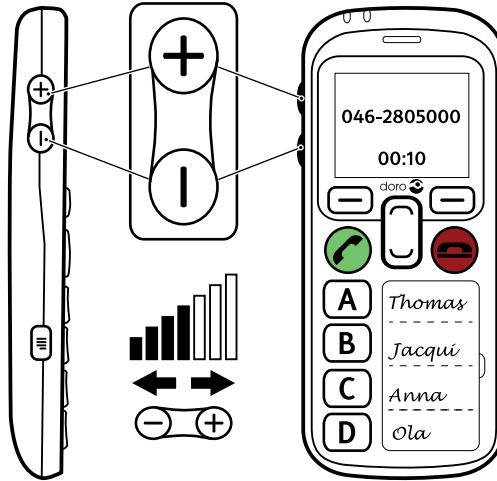 




## Handsfree mode

 The loudspeaker allows you to speak without holding the phone closely to the ear. Speak clearly into the phone microphone (A) at a maximum distance of 1 m.

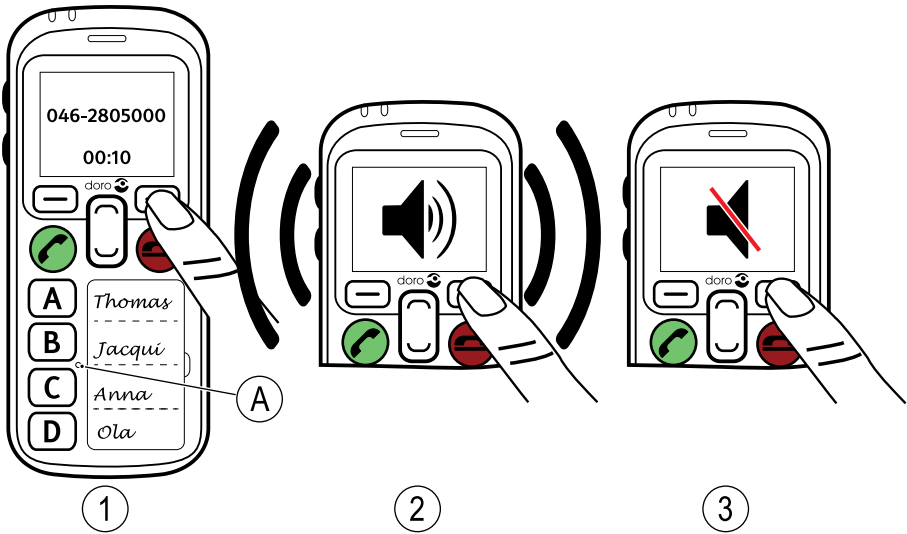


## Headset

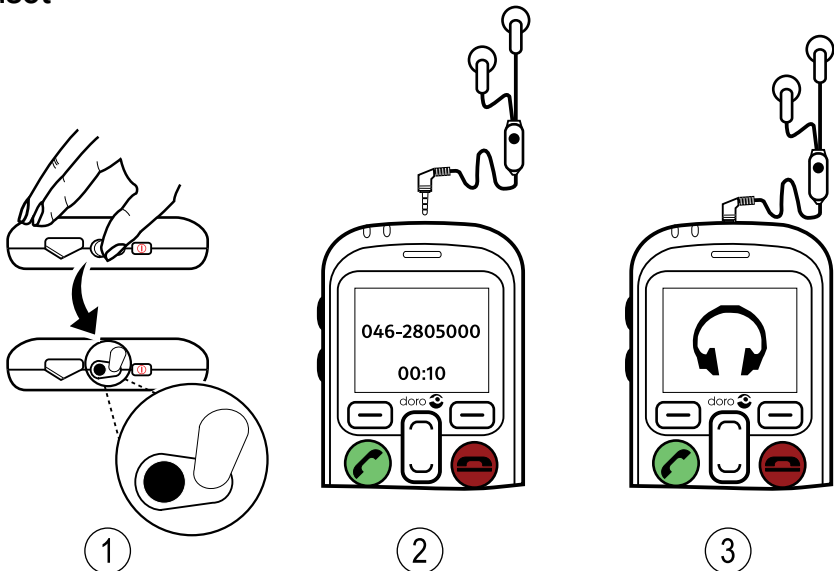 

## Emergency calls

As long as the phone is switched on, it is possible to place an emergency call.

1. Press **Menu** and select  **Emergency call**.
2. Select **Call** or press .

**Note!** Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.




## Assistance button

### CAUTION

When an assistance call is activated the phone is pre-set to handsfree/speakerphone mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

The assistance button allows easy access to contact your predefined help numbers should you need help.

### Make an assistance call


1. When help is needed, press and hold the Assistance button  for 3 seconds, or press it twice within 1 second. The assistance call begins after a delay. In this time you can prevent a possible false alarm by pressing .
2. An assistance text message (SMS) is sent to all recipients.
3. A positioning text message (SMS) is sent to all recipients.
4. The first recipient in the list is dialled. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed.

## Additional functions


The functions described in this section are optional and may vary depending on phone setup.

### Lock keys

You can lock the keypad to prevent the keys being accidentally pressed, for example, when your phone is in your handbag.

Incoming calls can be answered by pressing  even if the keypad is locked. During the call, the keypad is unlocked. When the call is ended or rejected, the keypad is locked again.

### Lock keys

1. Press **Menu** and select  **Lock keys**.
2. Press **Lock**.


### Unlock

- Press **Unlock** → **Yes**.

**Note!** Depending on phone settings, automatic key lock can be enabled after a set time.


### My number

The phone number assigned to your SIM card is saved as **My number**.

1. Press **Menu** and select  **My number**.
2. Press **OK** to view.

### ICE


First responders can access additional information such as medical information from the persons phone in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival.

1. Press **Menu** and select  **ICE**.
2. Press **OK** to view.

### Safety timer

Activate the safety timer to contact your predefined help numbers should you need help. For example, before taking a shower activate the safety timer and if not deactivated within a set time, your predefined help numbers are notified.

### Enable safety timer

1. Press **Menu** and select  **Safety Timer**.
2. Select **Function on/off** → **On** to activate.

---


## Disable safety timer


- Press **Cancel**.

## Messages

You can receive 200 text messages on your Doro Secure® 580.







**Note!** When you have received the maximum limit, the oldest text message is replaced in order to receive the new one.

1. Press **Menu** and select  **Messages**.
2. Select **Read**.
3. Press **Back** to exit.

**Tip:** When you receive a new message, you can select **Yes** to read it. Check the status bar for unread messages,  is shown.

## Call log

Received, missed and dialled calls are saved in a combined call log.

1. Press **Menu** and select  **Call log**.
2. Use / to select:
  -  Received call
  -  Dialled call
  -  Missed call
3. Select **View**.



Secure 580 (1011)

English

Version 1.0

©2014 Doro AB. All rights reserved.  
[www.doro.com](http://www.doro.com)

**CE 0700**

REV 12142 – STR 20140611