 



EM300 Alphanumeric Pager - User Guide

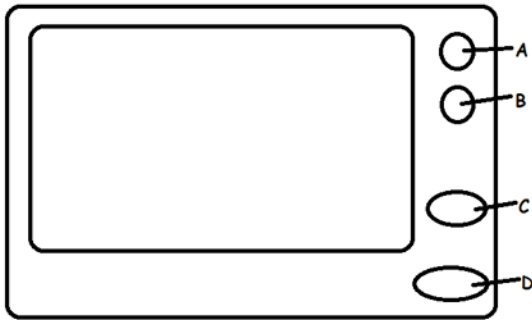

USING THE PAGER


First remove the battery cover then insert the AAA battery in the battery compartment observing the polarity marking. The pager will boot up after a couple of seconds with a tone and vibrate alert and display of any text entries.

 If the pager receives a message it will store it in it's memory unless deleted. The table below shows two methods of clearing messages and cancelling alarms. One, is as message is received, the other for a stored message causing a reminder.

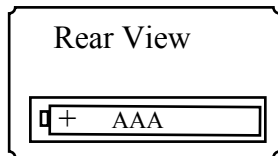


<i>CANCEL LIVE MESSAGE</i>	<i>PAGER DISPLAY</i>
PRESS C	MESSAGE DISPLAYED
PRESS C	MENU DISPLAYED
PRESS B	DELETE MESSAGE
PRESS C	DELETE MESSAGE?
PRESS C	MAIN MENU NO ICONS
<i>CANCEL STORED MESSAGE</i>	<i>PAGER DISPLAY</i>
PRESS D	MESSAGE DISPLAYED
PRESS C	MESSAGE MENU
PRESS B	DELETE MESSAGE
PRESS C	DELETE MESSAGE?
PRESS C	MAIN MENU NO ICONS
REPEAT ABOVE TO CLEAR	ALL STORED MESSAGES

 POC-920 Fob transmitter

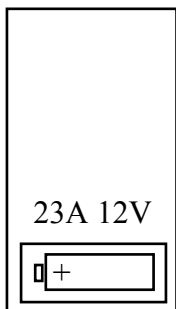

Remove battery cover by sliding down. Insert battery as shown. Replace battery cover. Press blue button to transmit message. Blue LED will light to confirm transmission. Red LED indicates low battery.

 EM-810L Tabletop Transmitter

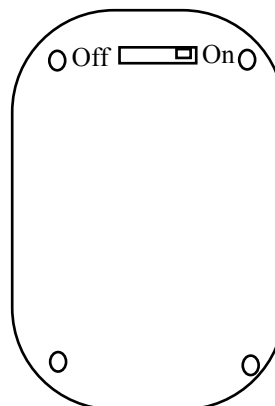

A battery will be pre-installed. Slide the switch to on position. Press blue button to send message. To replace battery, remove four screws then lift away bottom section of box. Replace battery with a good quality Alkaline 9 Volt battery. Replace screws.