

Dear Customer,

We are truly grateful that you have chosen us as your best product dealer. You are our most highly valued customers and it has been a sincere pleasure serving you. We hope that you will enjoy the fantastic quality of our products and services. We will continue our efforts to meet your requirements and expectations in the future as well. Your suggestions will help us shape our business to perfectly fit your standards.

This user's manual can help you have a thorough understanding of this product, and solve any problem that customers may encounter in using our products. Please read carefully for the user guide before using the device.

Safety Instructions



Warning

DANGER – Strangulation Hazard – Children have STRANGLED in cords.

Keep the baby camera unit and adaptor cords out of the reach of children more than 3 feet or 1 meter away. Never use extension cords with adaptors.

Do not place the camera or power supply in a child's cot/crib.

Camera settings and usage

 
- Fix the camera in a place where can be observed well of children/babies.
- Place the camera on a flat surface such as a dressing table, writing desk or shelf.
- Fix the cable on the wall to keep away from the baby.

Catalog

| | |
|--|----|
| 1. Product Overview..... | 5 |
| 1.1 PARENTS UNIT Consoleview..... | 5 |
| 1.2 PARENTS UNIT Status Bar Icon..... | 6 |
| 1.3 PARENTS UNIT Menu Icons..... | 7 |
| 1.4 BABY CAMERA Overview..... | 7 |
| 2. Start using..... | 8 |
| 2.1 CAMERA-SIDE Power..... | 8 |
| 2.2 Camera-side turn on and off..... | 8 |
| 2.3 Parents unit Switching on and off..... | 8 |
| 2.4 Watching The Image of Camera..... | 8 |
| 2.5 Pairing..... | 9 |
| 2.6 Formatting of TF card..... | 9 |
| 3. CAMERA-SIDE USING..... | 10 |
| 3.1 Installation..... | 10 |
| 3.2 Intercom Mode..... | 10 |
| 3.3 Night Vision Mode..... | 10 |
| 4. PARENTS UNIT Menu..... | 11 |
| 4.1 Camera Direction Adjustment..... | 11 |
| 4.2 Intercom Mode..... | 11 |
| 4.3 Volume Adjustment..... | 11 |
| 4.4 Display Brightness Adjustment..... | 11 |
| 4.5 Feeding Reminder (Alarm Clock)..... | 12 |
| 4.6 Lullaby..... | 12 |
| 4.7 System Time Setting..... | 12 |
| 4.8 Temperature Display..... | 13 |
| 4.9 Camera Display Selection..... | 13 |
| 4.10 VOX Setting..... | 13 |
| 4.11 Reset..... | 14 |
| 5. Cleaning..... | 15 |
| 6. FAQ and troubleshooting..... | 16 |
| 7. Specifications..... | 17 |

1. Product Overview

1.1 Parents Unit Console Overview

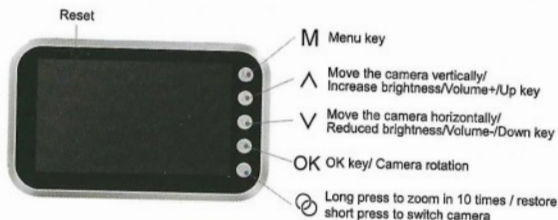

2. Start Using


2.1 Camera-side Power

- 1) Connect the Micro USB plug of the power adapter to the camera, the other side to the power outlet, it should connect the power adapter to the 110-220V AC outlet.
- 2) Once the camera is plugged in, it will automatically turn on and the blue indicator will be on (the night mode will automatically turn off).

2.2 Camera-side Turn On and off






- 1) Turn on, plug in the USB power cable.
- 2) Turn off, remove the USB power cable.

2.3 Parent Unit Switching On and Off

- 1) Charge battery for parents unit, The process from no power to full charge takes about 3-4 hours. But as long as the parents unit is plug in usb cable, the machine can be turned on and used.
- 2) Press and hold the power switch key  for 3 seconds to switch on/off the parents unit, pull out the receiving antenna on the parents unit.







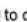



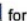




2.4 Watching The Image of Camera

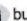When both the camera-side and the parents unit are turned on, the display should be able to display the image taken by the camera. (If the display is not normal, check the camera pairing pls.)

- 1) If the pairing is not successful, please refer to 2.5 Pairing Instructions to pairing camera;
- 2) If the paired camera is , need to press the switch key  to switch camera to  to display the image. If the paired camera is , you need to press the switch key  to switch to the  to display the image.


2.5 Pairing

Once the camera-side and parents unit are both switched on, they will be paired automatically. If not, follow the steps below:

- 1) When the camera is turned on, pls double press the power button  until the blue light flashes quickly, release the button, it will enter the code mode. At the same time, open the parent unit display and press  button to turn on the menu. Press  or  to select  and press  to confirm. In the pop-up bar, continue to press  button to select  and press  to confirm, and then press  or  to choose  or  for pairing. At this time, the red light in the upper left corner of the display will flashes, when pairing successful, the light of camera and display will stop flashing. The display will show the image of the pairing camera. If there is no connection for 10 seconds, the code mode will be automatically exited.
- 2) Press  to return to the main menu, press the camera switch button  to change camera.

(Note: one camera just can be connected to one display, but one display can be connected to two cameras at the same time)

2.6 Formatting Of TF Card



With new TF card, when the camera is powered on, press and hold the key  (3 seconds) to format the TF card. When the blue light flashes twice means the TF card format is completed, and then you can start record video. (The camera's TF card video can only be viewed on a computer or other device).

3. Camera-side Using


3.1 Installation

- 1) Place the camera in a convenient position so that it can aimed at the area you want to monitor.
- 2) Adjust the angle of the baby device by turning the camera up, down, left or right until a satisfactory image is obtained on the parent unit device.

3.2 Intercom Mode









Speak into the camera, the speaker on the display should be able to hear the voice, if not, you can press  or  to increase the volume (see the 4.2 volume adjustment in the manual for details)

3.3 Night Vision Mode




The camera equipped with 8 high-intensity infrared LED lights that capture clear images in the dark. When the built-in optical sensor detects that the ambient light is weak, the infrared LED will automatically light up, the screen of the parents unit will be show on black and white color, and the  icon will be displayed in the status bar at the top of the screen.

4. Parents Unit Menu



4.1 Camera Direction Adjustment

Press  key to start the vertical camera adjustment,  and  key to select the direction, adjust to the desired position, then press key  to confirm; Press  key to start the horizontal camera adjustment,  and  key to select the direction, adjust to the desired position, then press  key to confirm.





4.2 Intercom Mode

When the parents unit display needs to enter the intercom mode, you need to press  key and hold the key, then you can start the conversation. Release the  key when the speech is finished. After released  key of the display, the system will automatically enters the camera intercom mode

4.3 Volume Adjustment

Press the  or  button in the display mode to increase or reduce the camera's transmission volume. The volume has 6 levels, and you can select the appropriate volume from the volume level of 1-6.

4.4 Display Brightness Adjustment

Press  or  and hold the button in the display mode to pop up the brightness adjustment progress bar, then press the  or  button to select the appropriate screen brightness, wait for 3 seconds ,the system will automatically save the settings.

4.5 Feeding Reminder (Alarm Clock)

- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** or **▼** button until **ti** is highlighted, and click **OK** to confirm.
- 3) Press the **▲** button or **▼** button to select the alarm time for the feeding reminder (0.5h, 1h, 2h, 3h, 4h). To return to the previous step, press the **M** key.

If the alarm time is selected, the parent unit will beep every 0.5 hours, 1 hour, 2 hours, 3 hours, 4 hours, and the flashing flag of the feeding reminder will be displayed.

4.6 Lullaby

- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** or **▼** button until **ti** is highlighted, and click **OK** to confirm.
- 3) In the pop-up menu bar, press the **▲** button or **▼** button to select the lullaby you want in the 8 lullabies. Click **OK** to confirm. To play all the music in a loop, select the **ti** icon and press the **OK** key to confirm. Press the **M** key to return to the previous step.

4.7 System Time Setting

- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** or **▼** button until **ti** is highlighted, and click **OK** to confirm.
- 3) Press the **▲** button or **▼** button in the pop-up menu to adjust the clock, minute, second, AM/PM. Press the **OK** button when you complete the time setting and go to the next step. Press the **M** button to return to the previous step.

4.8 Temperature Display

- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** or **▼** button until **ti** is highlighted, and click **OK** to confirm.
- 3) In the pop-up menu bar, press the **▲** button or **▼** button to select **°C** or **°F** as the temperature unit and press the **OK** key to confirm. To return to the previous step, press the **M** key.

The screen status bar will display the temperature, reading from the temperature sensor on the back of the camera.

If the temperature is above 30 °C or below 20 °C, the temperature reading will turn red, and make a beep alarm.


4.9 Camera Display Selection


- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** button or the **▼** button, to select **Q1** camera1, **Q2** camera2 or **ti** switch and press the **OK** button to confirm viewing.
- 3) The display can be switched to view different lenses at the same time, you can switch the lenses between **Q1** and **Q2** in **ti** mode.
- 4) You also can press the **ti** button to quickly select **Q1**, **Q2** or **ti** switch mode to watch.

4.10 VOX Setting

VOX detection: Turn on the VOX mode, after 30 seconds, the screen will turn off. When the ambient volume of the baby is louder than the set value, the display will light up the display.

 
- 1) Press **M** button, it will pop up the menu bar.
- 2) Press the **▲** or **▼** button until **VOX** is highlighted, and click **OK** to confirm.
- 3) Select **LOW MED HIGH** modes to turn on VOX, or select **OFF** to turn off VOX.

4) In the VOX off mode ,short press the  button ,you can quickly enter the VOX mode (The quick access VOX mode will only turn off the display, but will retain the camera's music transmission)

Note: When the VOX is turned off, press the  power button and the display screen will turn off. You can hear the sound from the camera at any time. This mode is suitable for the baby to play when the adult needs to leave for a while. When the VOX mode is turned on, the screen and sound will turn off after 30 seconds. When the ambient sound of the camera is louder than the set value, the display screen will light up and the speaker will make a sound. This mode is suitable for use at night.

4.11 Reset

Use a small pin to reset

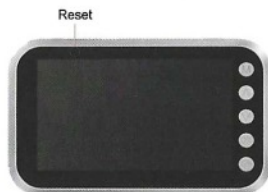

5. Cleaning

Clean the device with a slightly damp cloth or an antistatic wipe. Never use detergents or abrasive solvents.

Cleaning and maintenance

- Do not use thinner, other solvents or chemicals to clean any part of the product, which will result in damage to the product. This damage is not covered by the warranty.
- Do not expose the product to high temperatures, humidity, or strong sunlight, and do not get it wet.

6. FAQ & Troubleshooting

1. Q: Why is the distance in the room not far enough?

A: a. Check if the receiving antenna of the parent unit terminal is turned on;

b. Due to different wall materials of different houses, the blocking of 2.4G signals is different. When the signal is not satisfied, the position can be adjusted.

2. Q: Why there is always some noise in the background?

A: It is impossible to eliminate all the noise. This kind of howling has always been a problem in the audio field. Please keep your receiver and camera separate in 1 meter away or more.

Tip: The microphone of the receiver and camera cannot be too close. That is the reason why some users get confused when they operate the devices and always get noise in the background. This phenomenon is an uncontrollable factor.

3. Q: Why the temperature not precision showing on the screen?

A: a. There is a difference in indoor air circulation.

b. The temperature sensor just placed in a new environment, and there will be a deviation within two hours.

7. Specifications

Technical Parameter

| Model | ABM200 | | |
|---------------------------|--------------------|-------------------------|---------------------------|
| Camera | 1280x720P | Display | 4.5-Inch IPS |
| Camera Lens | 1/6CMOS | Display Resolution | VGA 480x800 15 frames/sec |
| View Angle | 75 Degree | Transmission Method | 2.4GHz FHSS |
| Display Battery Capacity | 2300 mAh | Transmission Distance | 300M(Open Space) |
| Display Power Dissipation | 1.6W | Temperature Alarm | Support |
| CAM Power Dissipation | 1.5W | Crying Alarm | Support |
| Operating Temperature | -20°C ~ +65°C | Lullabies | Support(8 Lullabies) |
| Material | PC+ABS | Feeding Alarm | Support |
| Display N.W | 140.0g | Night Vision(Automatic) | Support |
| Camera N.W | 160.0g | | |
| Camera Dimensions | 86.0x107.0mm (HxD) | Display Dimensions | 130.3x79.6x16.4mm(LxWxD) |