

Master lock 5401 KEYSAFE

In order to fix the safe to the wall you will need to open the keysafe in order to access the screws and fix to the wall.

HOW TO OPEN THE KEYSAFE

The combination dials are hidden from view by a sliding protective cover which needs to be pulled downwards to reveal the combination dials.

Once the cover has been pushed down you should now see 4 numbered dials. You should also see a line that runs behind the dials to help you as a guide for lining up your combination. Rotate each dial in turn till the number you require is showing. The factory setting is 0-0-0-0 to open the keysafe for the first time. Once the door is open you will see 4 holes in the back plate and the bag of screws is also inside the keysafe for you to fix to the wall. Follow the fixing instructions.

TO SET THE COMBINATION TO YOUR OWN

The starting combination is pre-set at the factory to 0-0-0-0

1. Locate reset lever on back of main door unit, then push the reset lever up and to the right. The lever remains in this position
2. Dial your desired combination (Be sure to record your combination. Store it in a safe location)
3. Push the reset lever, left and down, back to its original position. Your new combination is now set.

DO NOT TOUCH THE RESET BUTTON INSIDE AT ALL ONCE YOUR COMBINATION IS SET TO THE CODE YOU REQUIRE. You will only need to move the RESET button again if you wish to change the combination to a different one at any time in the future. Once the keysafe has been fixed to the wall, close the door to the keysafe firmly.

Day to day operational hints and tips

- **If you have moved the dials at all whilst the door is open then the door will not close. If the dials have been moved in error, rotate them back to your combination and then the door will close.**
- **Always scramble the dials as soon as you have closed the door otherwise anyone will be able to open your keysafe.**
- **Push the shutter door upwards to hide the dials from view and protect the dials from weather, dirt and grime.**