



Portable and plug-in door chime set


Model: 66712

Operating instructions


Please read **all** of the operating instructions carefully before use and keep in a safe place for future reference.

Quick set up guide - Portable chime unit


Insert a flathead screwdriver into the slot on the bottom of the bell push. Gently push and twist to separate.

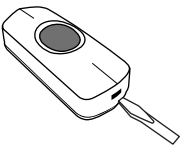

Insert 1 x CR2032 button cell battery, ensuring it is positive (+) side up.

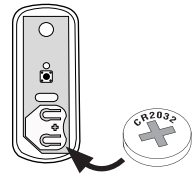


Slide down and remove the battery cover on the back of the chime unit. Insert 3 x AA batteries, observing the polarity markings.

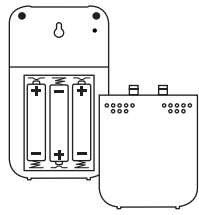


Press and hold the CHIME button on the top of the chime unit until you hear two "dings".

N.B. The current selected chime will sound before the "dings".

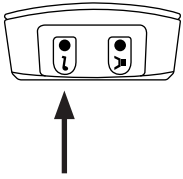


Press the button on the front of the bell push, you will hear a single "ding".

N.B. The bell push button will light red to confirm it is transmitting.

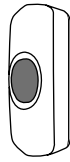

Press the CHIME button again, the chime will sound to confirm the bell push is set up with your chime unit.

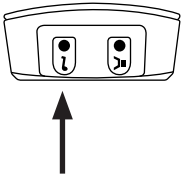

Installation

Test the units in their intended locations before you fix them in place.

The operating range will be reduced if the bell push is mounted on metal or double glazed uPVC door frames. Electrical / wi-fi equipment and the thickness or number of walls between the bell push and the chime unit will also reduce the operating range.

The bell push must be mounted the correct way up (as per the arrow on the back plate).

The portable chime unit can be used wall mounted, free-standing or carried around the home and garden.


The plug-in chime unit can be inserted into any 13A mains socket around the home (within range of the bell push).

Bell push - adhesive pad

Ensure the surface is clean and flat before applying.


Bell push - screws

Separate the bell push and punch out the holes on the back plate. Attach to the wall using the wall plugs and screws supplied.

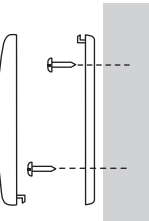


Portable chime unit - wall mounted

Fit a screw to the wall using a wall plug. Insert the screwhead into the keyhole on the back of the chime unit and slide down.

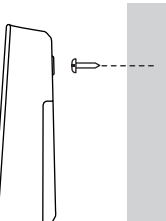


Quick set up guide - Plug-in chime unit

Insert the chime unit into any 13A mains socket and switch the power on.

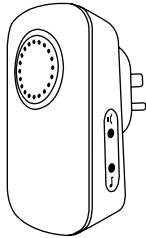


Press and hold the CHIME button on the side of the chime unit until you hear two "dings".

N.B. The current selected chime will sound before the "dings".

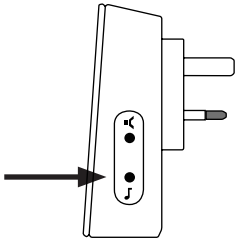


Press the button on the front of the bell push, you will hear a single "ding".

N.B. The bell push button will light red to confirm it is transmitting.

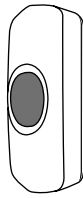


Press the CHIME button again, the chime will sound to confirm the bell push is set up with your chime unit.

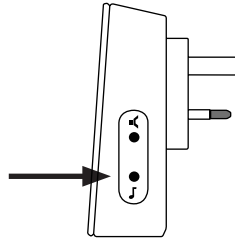


Battery replacement - bell push

Remember to replace the battery in the bell push every 12 months.

Insert a flathead screwdriver into the slot on the bottom of the bell push. Gently push and twist to separate.

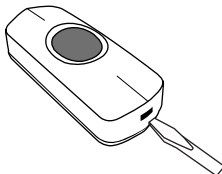

Insert 1 x CR2032 button cell battery, ensuring it is positive (+) side up.

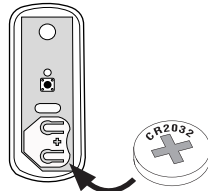

Repeat the **Quick set up guide** to reconnect your bell push to the chime unit.

Sound selection


The portable door chime has 32 selectable sounds.

Press the CHIME button on the top/side of the chime unit to cycle through the different chime sounds. Stop when you hear the one you want.


Volume control

Press the bell push to sound the chime unit. While the chime is sounding press the VOLUME button on the top/side of the chime unit to cycle through the four volume settings.


Portable chime unit

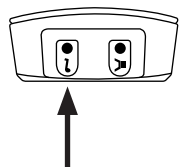


Plug-in chime unit

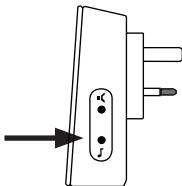

Portable chime unit

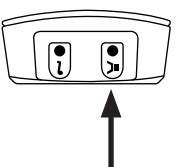

Plug-in chime unit

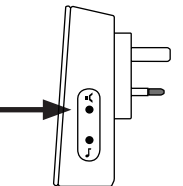

Battery replacement - Portable chime unit

Repeat the quick set up guide.



Portable and plug-in door chime set

Model: 66712

Troubleshooting guide

Please do not hesitate to contact our friendly customer service team who will be more than happy to help you with any problems you are experiencing with your door chime set up.

My door chime is not working?

Does the red LED illuminate on the bell push when you press the button?

If **NO**:

- Check to see if the battery tab has been removed. It should be sticking out the side of the bell push and can be removed by gently pulling in the direction of the arrow.
- Replace the battery in the bell push. Please refer to the **Battery replacement – bell push** section in the operating instructions.

If **YES**:

- Replace the batteries in the portable chime unit. Please refer to the **Battery replacement – portable chime unit** section in the operating instructions.
- The chime unit may not be receiving a signal from the bell push, this can be caused by internal walls or uPVC frames. Move the chime unit closer to the bell push.
- The chime unit could be receiving interference from other electrical and wireless devices. Please refer to **My chime unit sounds when nobody is pressing the bell push?** section within this troubleshooting guide to set your door chime up on a different channel.

My chime sounds when nobody is pressing the bell push?

The common cause for this is that your chime unit is picking up outside interference from other wireless transmitters. Do not worry, all Smart Chime door chimes are programmed with 256 randomly selected channels to help avoid such a problem.

- Repeat the **Quick set up guide** section in the operating instructions.

Your door chimes will now be set up on a different channel.

As stated above the channels are randomly selected so you may need to repeat the above process more than once.

My door chime only works temporarily (I keep having to reconnect the bell push to the chime unit)?

The common cause for this is that the power in the bell push battery is getting low (meaning that your door chime set up keeps losing signal and why you repeatedly keep having to pair the bell push to the chime unit).

- Replace the battery in the bell push. Please refer to the **Battery replacement – bell push** section in the operating instructions.

How do I add another chime unit to my existing door chime set up?

Smart Chime portable and plug-in door chimes work together and you can add an unlimited number of them to your set up. This will increase the sound area and means you can have a chime unit in every room in your house if you wish.

- Repeat the **Quick set up guide** section in the operating instructions with your new portable or plug-in chime unit.

How do I add another bell push to my existing door chime set up?

A Smart Chime bell push will work with all Smart Chime portable and plug-in door chimes. Please note however that other manufacturers bell pushes will not work with Smart Chime door chimes.

A maximum of 4 bell pushes can be paired to the same chime unit.


(1) Remove the battery tab from the new bell push by gently pulling in the direction of the arrow.

(2) Repeat the **Quick set up guide** section in the operating instructions.


Specification
320V AC 50Hz
R2 device

Hereby, Uni-Com (Global) Ltd declares that the radio equipment type door chime is in compliance with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available to view at www.uni-com.co.uk.

Safety warning
Keep out of reach of children. For indoor use only (operating temp: 0°C to 40°C). Do not drop either unit or subject to excessive blows. The bell push is weather resistant, do not submerge. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries must be removed immediately. Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Batteries
 The bell push uses 1 x CR2032 button cell battery and the portable chime unit uses 3 x AA batteries. They should be removed prior to disposal. Help the environment by disposing of your products and batteries responsibly.

Guarantee
This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the units. Proof of purchase required. This does not affect your statutory rights.

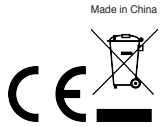

Smart Chime by Uni-Com (Global) Ltd.

1 & 2 Enterprise Way,
Edenbridge, Kent, TN8 6EW

+44 (0)1732 865238
info@uni-com.co.uk
www.uni-com.co.uk