

User Instruction

- Open the cap on water reservoir by turning to the right.

- Fill the chamber with hot water.

- Close the cap by turning to the right

and make sure it fits tightly by

pointing the 2 arrowheads.

- Cover the food before serving to help

retain heat.

- Use handles to carry safely.

Cleaning

The keep warm dish can be dismantled into five parts for easy cleaning on top shelf dishwasher. Please remember to take off the non-slip ring and cap which can only apply to temperature under 80°C.

White



Red

