

MEMO MINDER PLUS

Introduction

The Memo Minder Plus is a battery or AC powered solid state media player which uses a Smart PIR capable of detecting direction and playing either of two different user recorded messages accordingly.

The Bi-Directional sensor enables the owner to record appropriate warning messages for those entering a building or leaving / answering the door.

The purpose of the Memo Minder Plus is to promote good doorstep practice; to act as a memory reminder to keep a door locked; to ask for ID or to provide other messages.

Record Mode

To activate the unit, turn the power switch to the "ON" position.

Right

1. Move slide switch on the RIGHT side of the unit to "RECORD", when the LED light is lit unit is recording.
2. For best quality playback sound, record your message at a distance of 6" (15cm) from the microphone.
3. Record time is 1-20 seconds, when unit is full the LED will switch off. The recording can be stopped at any time by returning the slide switch to the "OFF" position.
4. When a new message is recorded it will automatically delete the previous one.

Left

1. Move slide switch on the LEFT side of the unit to "RECORD", when LED light is lit unit is recording.
2. For best quality playback sound, record your message at a distance of 6" (15cm) from the microphone.
3. Record time is 1-20 seconds, when unit is full the LED will switch off. The recording can be stopped at any time by returning the slide switch to the "OFF" position.
4. When a new message is recorded it will automatically delete the previous one.

Auto-Player Mode

Right

1. After recording your message move the RIGHT slide switch to "AUTO PLAYER"
2. Wait 1 minute to allow the unit to stabilise. Once stabilised the unit will detect any movement from the right and will play the recorded message of the RIGHT speaker once. Continuous movement once the unit has reset (approx 30 seconds including message) will cause message to trigger again.

Left


1. After recording your message move the LEFT slide switch to "AUTO PLAYER"
2. Wait 1 minute to allow the unit to stabilise. Once stabilised the unit will detect any movement from the left and will play the recorded message of the LEFT speaker once. Continuous movement once the unit has reset (approx 30 seconds including message) will cause message to trigger again.

Off Mode

1. Both recorded messages will still be retained even when slide switch is in "OFF" position.

Replacing Batteries

1. When playback sound is weak or sensor stops detecting motion properly then please replace the batteries.
2. To replace batteries remove battery cover removing previous batteries replacing with new batteries noting the polarity indicated.
3. Installing batteries incorrectly can damage the unit.
4. Turn off the unit before change new batteries.

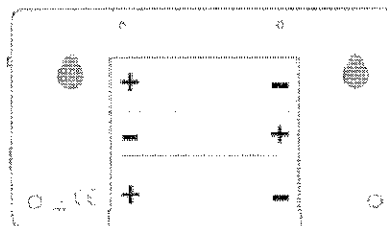

CAUTION

Always seek professional assistance for repair

Replace the battery when the battery is low

Improper use or man-made damage is not covered under the guarantee

The unit must not be exposed to extreme temperatures, radio frequency, direct sunlight, intense vibration, humidity or heavy mechanical stress

Product code: EA0404