


MEMO MINDER MKII

Introduction

The Memo Minder MKII is a battery or AC powered solid state media player which records your personalised message, (No Tape Required). Your message is recorded onto a circuit board then played when the passive infrared motion detector is triggered. The unit has many home safety and security applications, as well as being a useful tool for health and safety procedures. Serves many other purposes within the home and work environment.


Record Mode

1. Move the side switch located on the side of the unit to "RECORD", when red LED is lit unit is recording
2. For the best quality playback sound record your message at a distance of 6" (15cm) from the microphone.
3. Record time is 1-20 seconds when unit is full the red LED will switch off. The recording can be stopped at any time by returning the slide switch to the off position.
4. Any new message recorded will record over previous ones.

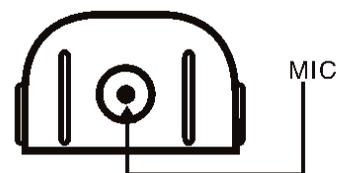

Auto-Player Mode

1. After you have recorded your message move the slide switch to "AUTO PLAYER".
2. Wait 20 seconds to allow the unit to stabilise. Once stabilised the unit will detect any movement in the detection area and play recorded message once. Continued movement once the unit has reset (approx 30 seconds including message) will cause message to trigger again.

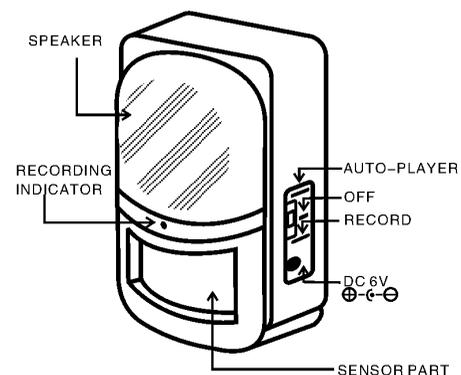


Optional mains power adapter available.


Detection Range

Detection Coverage

Up to 4-5 meters

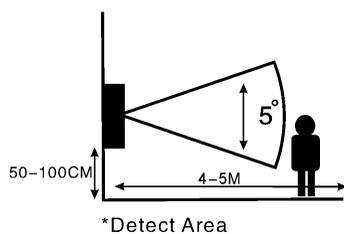

Detection Range

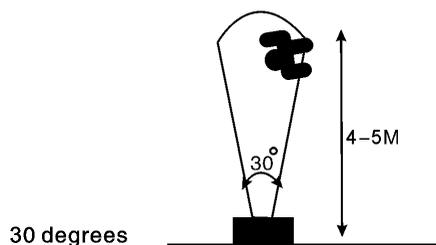

Off Mode

1. Recorded message will still be retained even when slide switch is in "OFF" position.

Replacing Batteries

1. When playback sound is weak or sensor stops detecting motion properly then replace batteries.
2. To Replace batteries remove battery cover removing previous batteries replacing with new batteries noting the polarity indicated
3. Installing batteries incorrectly can damage the unit
4. Message will be lost if batteries are removed for any longer than one minute.

CAUTION

Always seek professional assistance for repair

Replace the battery when the battery is low.

Improper use or user made damage is not covered under the guarantee



Product code: EL00041