

965.1 TALKING DUAL DISPLAY ALARM CLOCK INSTRUCTION MANUAL (YL-888CS)

Getting started.

Insert batteries. Remove the battery door and fit 2 x AA batteries observing the polarity (+/-) signs. Replace the battery door. Please read the section under battery information.

Press the "RESET" key by using a long thin object (i.e. straighten wire paper clip) and press the reset key gently. This will clear any old settings.

Press the large top button to check that the talking function is working.

Please note that the talking function will only speak the time shown on the digital display. Normally you would set the digital time and the hands to the same time, but you may prefer to use the two times to show different time zones.

Now proceed to set the time as follows:

To set the digital time.

Insert batteries. Remove the battery door and fit 2 x AA batteries observing the polarity (+/-) signs. Replace the battery door. Please read the section under battery information.

Press "SET" repeatedly until numbers flash and 2 dots remain constant. (*Note: will return to non-set mode if no button pressed for 10 seconds*)

Press "HR" to move hours forward until correct hour displayed (check for AM or PM).

Press "MIN" to move minutes forward until correct minutes are displayed.

Wait until the digits stop flashing (takes about 10 seconds). The time is now set.

Press the large top button and the digital time will be spoken.

To set the alarm time.

Press "SET" repeatedly until numbers flash and "AL" is shown on the display

Press "HR" to move hours forward until correct alarm hour displayed (check for AM or PM)

Press "MIN" to move minutes forward until correct alarm minutes are displayed.

Wait until the digits stop flashing (takes about 10 seconds). The alarm time is now set.

To switch the alarm on/off.

Press "SET" repeatedly until the "BELL" symbol is shown (alarm on).

Press "SET" repeatedly until the "BELL" symbol is not shown (alarm off).

When the alarm is ON, it will stop after one minute. To stop midway, press "HR" or "MIN".

To select the alarm sound.

In the normal time display mode press "HR" repeatedly until the sound you want is played.

To use the SNOOZE function

When the alarm sounds press the top "TALKING" key. The time will be announced once, and the alarm will stop and go into snooze mode then sound again after 10 minutes.

To switch the hourly chime on/off

In the normal time display mode press "MIN" until the "CHIME" symbol is shown (chime on).

In the normal time display mode press "MIN" until the "CHIME" symbol is not shown (chime off).

To set the hands (analogue time).

Use the adjust wheel on the clock back.

To reset the clock

Under some environmental conditions, electrostatic discharge or radio frequency interference may cause your clock to malfunction. Reset by using a long thin object (i.e. straighten wire paper clip) to press the reset key gently. After reset the clock time will need to be set-up again.

BATTERY INFORMATION

- This product uses 2 x AA size batteries (not included)

- Alkaline manganese batteries recommended
 - A) Press down the clip and pull towards you to open the battery door located at the back of the clock.
 - B) Remove the old batteries and insert new 2 x AA size batteries. Observe polarity (+ -) sign when installing battery.
 - Replace and secure the battery door.
 - Use only designated battery type. Do not use re-chargeable batteries. Do not mix battery types.
 - Read instructions carefully and install batteries correctly observing the polarity (+ -) sign to avoid leakage.
 - Always replace sets of batteries at the same time. Do not mix old and new batteries.
 - Do not attempt to recharge non-rechargeable batteries.
 - Remove batteries from the product when it will not be used for an extended period of time to avoid leakage.
 - Remove exhausted battery to avoid leakage.
 - Do not short out battery contacts.
 - Do not dispose of batteries in fire.
 - Do not immerse electrically operated products in water or other liquid.
- Wipe clean only.

Please retain this information for future reference.



Lifemax Ltd
 The Business Centre,
 Brimpton
 Reading, RG7 4TN
www.lifemaxuk.co.uk