



Owner's Manual
Integral Air Chair

Integral Air Chair

Introduction

Thank-you for purchasing your Integral Air Chair.

The Integral Air Chair is designed for persons with limited mobility and requiring pressure relief care. The chair is multi-adjustable to provide the Occupant maximum comfort and the Caregiver ease of use.

If you have any questions on the use and operation of the chair, please contact your Integral Provider.

Safety Notes:

- Occupants should not be left unattended in the chair.
- Smoking is prohibited while using the chair by the Occupant or by the Caregiver when providing assistant to the Occupant.
- The chair is not to be used for transporting Occupants in moving vehicles.
- Caregivers should have read and understood the owners manual and the functions of the chair prior to use.

Benefits of the Integral Air Chair

- Pressure relief with position adjustment for long term mobility
- Prevention of pressure sores with covers and cushion system
- Ease of transference of occupant with side transference
- Simple to operate and maintain

Occupant Pressure Sore Risk — High

Occupant Mobility Level — Limited Mobility / Immobile

Integral Air Chair

Specifications

The Integral Air Chair is designed and manufactured with to the needs of the Occupant and Caregiver.

The chair has the capability to be adjusted to meet the needs of the individual Occupant and readjusted as those needs change. The chair is also adjustable for other Occupant's requirements when changing users.

Chair Specifications:

- The chair has a Safe Working Load (SWL) of 120 kg.
- The char has lockable casters for safety.
- The chair covers are made from stretchable polyurethane material for comfort against Occupant's skin.
- The chair cushion of polyurethane foam.
- The chair has adjustable air cushions to provide individual comfort to the Occupant.
- The chair can be adjusted for Tilt, Recline and Leg Adjustments.



Measure-ment	Seat Width	Seat Height	Seat Depth	Overall Depth	Overall Height	Overall Width
mm	510	610	560	1300	1300	710
inch	20	24	22	51	51	28
	Recline		Tilt		Leg Rest	
	97° ~ 136°		0° ~ 90°		0° ~ 17°	

Integral Air Chair

Adjustability

Seat Tilt and Recline:

- The chair can be adjusted for both Seat Tilting to relief pressure on the lower back and Back Recline to allow for comfort.
- The levers on the rear handle bars are used for adjusting the Tilt and Recline by the Caregiver. Press the release lever and adjust to the required position.



Adjust Seat Tilt

Adjust Back Recline

Seat Tilt and Recline

- The chair can be adjusted to raise, lower, length and shorten the Leg Rests.
- The levers on the side arm releases the gas struts to raise and lower the Leg Rests. The Leg Rests can be lengthened and shorten by adjusting the foot rests location hand screws.



Adjust Length Hand Screw

Leg Rest Release Lever

Integral Air Chair

Adjustability

Wings and arms Adjustment:

- The wings can be adjusted for comfort and side transference.
- The round knobs on the rear releases the wings for adjustment.

Left Knob Release

Right Knob Release



- The arms can be adjusted open for side transference.
- The round knobs near the knee releases the arms.

Arm Knob Releases



Integral Air Chair

Adjustability

Casters:

- The chair has both one Directional Locking Caster to allow ease of movement and three Total Locking Casters to prevent the chair from moving when at rest.
- The Directional Locking Caster has the black locking tab and is Rear Right Caster. Engages this caster allows the Caregiver ease of pushing the chair in a straight line.
- The Total Locking Casters are both Front and the Rear Left Casters with the red locking tab. There should always be engaged when the chair is at rest and when transferring an Occupant into and out of the chair.

Total Locking Caster

Directional Locking Caster



Cushions and Air Bladders:

- The chair has a removable Overlay Cushion System for ease of maintenance and adjustment.
- The Overlay is removed by unzipping the top of the cushion behind the head rest and releasing the closure snap buckles under the chair. The overlay can then be removed and unzipped to allow access to the Air Bladders and Cushions.

Integral Air Chair

Adjustability

Unzip and remove the Overlay Cushion System

 


Unzip Overlay Cushion System and adjust air bladder



Dining Tray:

- The chair has a removable Dining Tray which is held in place with Hand Screws

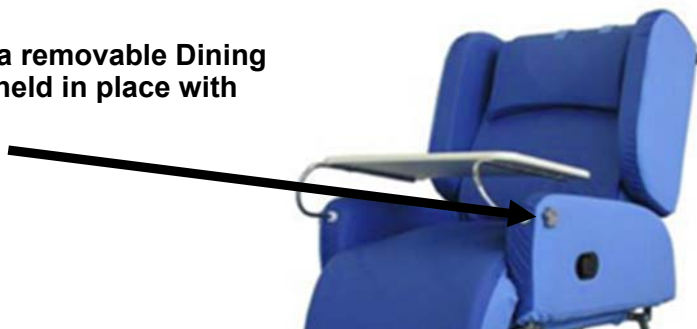

Integral 

Care Technologies Ltd

Integral Air Chair Warranty

Please retain this manual for the warranty details and proof of purchase.

Product: Integral Air Chair—Standard

Model: C02-PU-BLU

Serial Number:

Terms of Warranty:

- 5 Years on Frame under normal usage and wear.
- 1 Year on Covers, Cushions, Table, Casters, Gas Struts under normal usage and wear.
- Warranty covers the replacement of parts and components only and is exclusive of labour.
- Warranty covers the normal usage of the product only.
- Warranty commences from the date of sale.
- Warranty is void if the product is misused or not used in accordance with the manual, if the product is altered or modified in any manner, if substitute parts or components are used on the product.

Manufactured By:
Integral Care Technologies Ltd
Hong Kong

Distributed By:
NRS Healthcare
UK
www.nrs-uk.co.uk