

Key Safe

Heavy Duty Select Access Key Storage

Product Code: HA00006

IMPORTANT!

Please read the following instructions carefully before installing your key safe. Always wear goggles or other suitable eye protection before starting to drill.

Contents

- 1 x Key Safe
- 1 x Neoprene cover to protect and disguise your key safe
- 1 x Instructions
- 4 x Thunderbolts for securely fixing your key safe

Inside a convenient plastic storage bag

- 1 x Combination Protector Card with instructions
- 1 x Combination setting key

A. Installation

Before you start you will need the following items to install your key safe:

- 4 x thunderbolts (6mm x 50mm) - supplied
- A power drill and extension lead (or heavy duty battery operated power drill)
- 5mm masonry drill bit
- Goggles or other suitable eye protection
- Marker / Pencil
- Tape Measure
- Roll of tape (electrical, masking or similar)
- A ratchet, extension and 8mm socket or a 8mm socket attachment for your power drill

Positioning your key safe

Your key safe should be carefully positioned so it is hidden from view. Typical locations might include: behind dustbins, plants, plant pots, in dustbin bays, behind drain pipes, on the side or rear of the property or any other location that is out of sight.

Fixing your key safe

Select a flat area of wall in area where you can drill into brick. Try not to drill into mortar as this can often crack and in any case may allow the key safe to be prised off the wall.

Ideally position your key safe across 2 or more bricks for maximum security.

Marking the wall

Using the base of the neoprene cover as a template, mark 4 x hole positions onto the wall with a marker or pencil.

Drilling the brick

The holes that secure the thunderbolts must be drilled to at least 50mm. **It is essential that the holes are the correct depth - if not it will prove very difficult to fit the key safe properly.** Using the tape measure determine a distance of 50mm from the tip of the drill bit and wrap some tape around the bit to act as a marker. This should help you to drill to the correct depth and avoid drilling the holes unnecessarily deep. Drill the four holes to the correct depth using the power drill.

Inserting the thunderbolts & fitting your key safe

Position your key safe and neoprene base over the 4 holes and insert the thunderbolts through the holes and hand tighten.

Using your 8mm socket / ratchet / power drill carefully tighten the bolts.

The bolts will "self tap" into the holes making the key safe very secure. Do not over tighten as this may cause the key safe to distort in shape or the thunderbolts may bind into the metal of the key safe.

IMPORTANT: If the wall is not flat or if the thunderbolts are over tightened the key safe may distort. This will mean it may not close or open properly. This is not a fault of the key safe and is not covered by warranty. In some case the key safe may be rendered unusable. Care should be taken in choosing a suitable location and ensuring the fittings are not over tightened.

B. Your key safe

On the front of the key safe there are 10 buttons numbered 1 to 0. There is also an OPEN slide catch and a C (CANCEL) button.

The key safe is shipped from the factory without a preset combination. This means that the OPEN slide catch will open the key safe without any number buttons being pressed. The key safe will not open if any of the numbers have been pressed.

When a number button is pressed it will remain down. This is so the user can easily check if the correct combination has been entered (once opened number buttons will automatically reset).

If a button is pressed accidentally or incorrectly the C (CANCEL) button should be pressed down. This clears the memory and resets all the number buttons.

Select your own combination for the key safe. Each number in a combination can only be used once.

It is recommended that you do not use a number combination that can be easily guessed. Avoid numbers linked to your telephone number or birthday. Do not use a bank card PIN number as this may breach your financial security should someone determine the combination to your key safe. Use a unique number that only you will know between four and six numbers inclusive.

Select a combination and record it on the *Combination Protector* card included; this should be safely stored so that in the unlikely event that you forget your combination it can be located and used to access your keys.


C. Setting your combination

WARNING: Please note that if you forget your combination gaining access to your key safe is not covered by your warranty.

Once the lid is closed, access to your key safe can only be made using the combination that has been set.

To set the combination for the first time, push the C (CANCEL) button down to clear the memory and reset the number buttons. Slide down the OPEN button and pull open the lid. The top of the key safe is conveniently hinged and will rest in a horizontal position.

- Inside there are 10 metal buttons numbered 1 to 0 with arrow indicators. The key safe is shipped from the factory without a preset combination and so all the arrows will be facing downwards indicating that no combination is set. (The numbers correspond to the numbered buttons on the front of the lid.) *Under no circumstances should you remove the screws on the inside cover of the lid as this will void your warranty.*

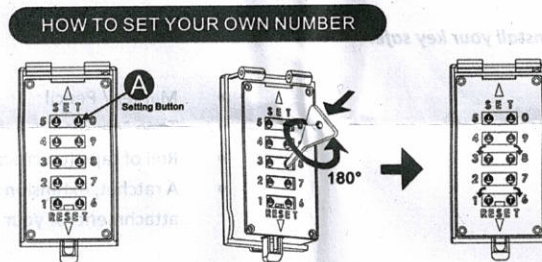

- Use the combination setting key provided. For each number in your combination, apply light pressure and rotate a half turn so that the arrow points upwards. The arrow head should align to the corresponding cut out. If the arrow points are not aligned correctly the combination may not work.
- Check that the correct numbers have been selected and set correctly. Double check and then follow the test instructions below. *Once the lid is closed access to your key safe can only be made using the combination that has been set.*

D. Testing your combination

IMPORTANT: Test thoroughly before closing the lid of your key safe. Once the lid is closed access to your key safe can only be made using the combination that has been set.

- On the front of the lid, push the numbered buttons that are in your combination. The numbers can be entered in any order. The numbers selected will stay down.
- Press down the OPEN button. If the combination is set correctly, the OPEN button will slide down fully and the numbered buttons will reset. If the combination was set incorrectly, the OPEN button will not slide down.
- If the OPEN button does not slide down, DO NOT CLOSE YOUR KEY SAFE. Push the C (CANCEL) button down to clear the combination and refer to section C. *Setting your combination*

E. Changing your combination

- Open your key safe using the current combination.
- Inside the key safe the combination needs to be reset using the combination setting key. Rotate all the arrows so they are facing downwards indicating that no combination is set. (The numbers correspond to the numbered buttons on the front of the lid.)
- Refer to section C. *Setting your combination*

Limited warranty

Solon Security warrants that this product will be free of defects in material and workmanship for one year from the date of purchase. This warranty is limited to repair or replacement at Solon Security's option. Damages caused by modification abuse or misuse, wear and tear, improper installation, application, storage, or fault or negligence of a party other than Solon Security are not covered. Solon Security will not be responsible for labour cost of removal or reinstallation of products. The repaired or replaced product is then warranted under the terms of this limited warranty for the balance of the term of the warranty or for 90 days, whichever is longer. To obtain repair or replacement information under the terms of this warranty, please contact your supplier.