

Combination Protector Card

IMPORTANT!

Please read the following instructions carefully before using your key safe.

1. If possible your key safe should be fitted in a covert position. Behind dustbins, plants or plant pots, in dustbin bays, behind drain pipes, on the side or rear of the property or any other location that is out of sight.
2. A combination of 4, 5 or 6 digits is recommended.
3. Be sure to record your combination on this card and store it in a safe but convenient location. For greater security, please change your combination periodically.
4. Use only the size and type of dynabolt fixings supplied to secure your key safe.
5. Always use the black neoprene cover supplied with your key safe. This provides a disguise for your key safe and it also protects your key safe and its contents from the elements.
6. Always fit your key safe to brickwork or concrete areas as opposed to wooden surfaces.
7. It is imperative that only authorised personnel are issued with your combination. Should you change your combination always remember to inform all relevant persons.
8. Where possible liaise with your local emergency services and inform them of the location of your key safe and how to obtain the combination in the event of an emergency.

Using your key safe

1. Open the neoprene cover.
2. The keys should not be depressed (if they are it might be that someone has tried to gain access and failed).
3. Push down the C (Cancel) button to clear the memory and reset the number buttons.
4. Enter your combination.
5. Slide down the OPEN button and pull open the lid. This will automatically reset the number buttons. The bottom of the key safe is conveniently hinged and will rest in a horizontal position.
6. Unhook your keys & remove them from the Key Safe.
7. Close your key safe (**no combination is required**). The key safe is now locked.
8. Replace the neoprene cover.

Combination

Record your combination below:

--	--	--	--	--	--

www.solonsecurity.co.uk