

PYRAMIDE SONS ET LUMIERES RELAXANTS

MANUEL D'INSTRUCTIONS

Pour insérer les piles, faites coulisser le couvercle situé sous le socle de l'appareil et respectez la polarité des piles


Faites glisser le premier bouton sur la position « ON » (« MARCHE ») ou sur la position « 30 MINS » (« MINUTEUR » 30 MINUTES).

Avec le deuxième bouton, choisissez la lumière (LIGHT), le son (SOUND) ou la lumière et le son (L/S)

Appuyez sur le haut de la pyramide pour activer ou désactiver les fonctions

Dans le cas où vous optez pour la lumière, un spectre circulaire de couleurs s'allumera

Dans le cas où vous optez pour le son, appuyez sur une des 5 images pour sélectionner le son souhaité. Le son peut être arrêté à n'importe quel moment en appuyant sur le bouton SOUND ON/OFF (MARCHE/ARRÊT SON)

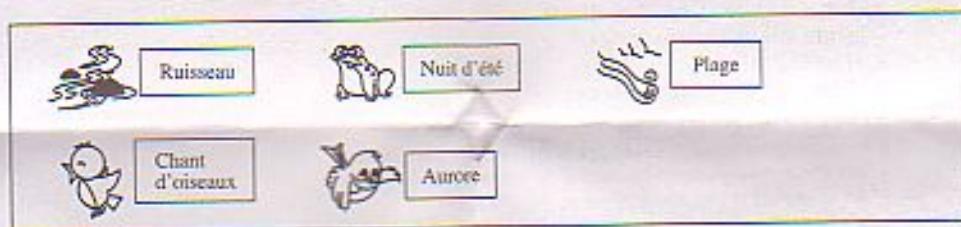

Après utilisation, faites glisser le bouton dans le sens inverse sur la position « OFF » (ARRÊT) pour ne pas user les piles.

REMARQUE : Si l'appareil ne fonctionne pas, remplacez les piles par 3 piles AA

Les produits portant le symbole d'une poubelle à roulettes barrée, comme illustré ci-après, sont des équipements électriques et électroniques. Ce symbole indique que les déchets d'équipements électriques et électroniques ne peuvent pas être mis au rebut avec le reste des déchets ménagers, mais doivent être collectés séparément, conformément aux législations et réglementations locales en vigueur

Importateur:
Lifemax Ltd
Unit 1, Pipers Court,
Thatcham,
RG19 4ER.
England



INSTRUCTION MANUAL

- 1) Slide open the cover on base of unit and insert 3 pieces AA batteries being careful to follow polarity.
- 2) Slide the left switch on the base to the "ON" or "30MINS". Note the "30MINS" works only in "SOUND" mode.
- 3) Slide the right switch on the base to "LIGHT", "SOUND", OR "L/S" for light and sound together.
- 4) Press the top of the pyramid to activate/deactivate device.
- 5) If "SOUND" function was selected, press any of the five images to choose the desired sound. The sound can be stopped at any time by pressing the "SOUND ON.OFF" button.
- 6) After use, return the switch to the off position to preserve the battery.



Babbling Brook



Chirping Birds



Nighttime Chirping



Forest Wildlife



Ocean

Battery Replacement Method:

1. Slide off the battery door.
2. Insert battery
3. Slide on the battery door

BATTERY INFORMATION

- This product uses 3 x AA size batteries (not included)
- Alkaline manganese batteries recommended
- A) Slide off the battery door at the bottom.
- B) Remove the old batteries and insert new 3 x AA size batteries. Observe polarity (+ -) sign when installing battery.
- Replace the battery door.
- Use only designated battery type. Do not use re-chargeable batteries. Do not mix battery types.
- Read instructions carefully and install batteries correctly observing the polarity (+ -) sign to avoid leakage.
- Always replace sets of batteries at the same time. Do not mix old and new batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove batteries from the product when it will not be used for an extended period of time to avoid leakage.
- Remove exhausted battery to avoid leakage.
- Do not short out battery contacts.
- Do not dispose of batteries in fire.
- Do not immerse electrically operated products in water or other liquid. Wipe clean only.

LIFEMAX LTD.

Unit 1, Pipers Court,
Thatcham,
RG19 4ER, England
www.lifemaxuk.co.uk
Retain for reference

