


LOCKPAL®

INSTALLATION INSTRUCTIONS

PLEASE MAKE SURE YOUR LOCK AND KEY LOOK LIKE THIS

Lockpal will only fit this type of lock.

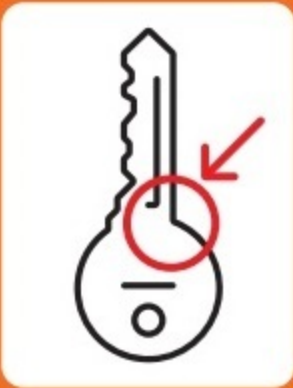

If your key looks like this, at **Step 3** insert key roughly half-way into lock.

OR



If your key looks like this (with a shoulder) at **Step 3**, make sure key is **FULLY** inserted while pressing Lockpal into place.

Step 1 - Clean area just above key hole with alcohol wipe provided.



Step 2 - Measure how far lock protrudes, (see diagram) and select number of pads needed (1mm = 1 pad).

Step 3 - Insert key roughly half-way into lock.



Step 4 - Remove backing from one side of a pad and stick to lockpal. Remove remaining backing.

If using multiple pads, ensure no backing paper is left between them.



Step 5 - Slide Lockpal down onto key as shown.



Step 6 - Keeping Lockpal vertical, press firmly into place ensuring there is no gap between the top of the key shaft and the Lockpal.

**VISIT OUR WEBSITE AT
WWW.LOCKPAL.CO.UK**